

Быстрозажимные гайки ProGrip

Описание

По вопросам продаж и поддержки обращайтесь:

Алматы (7273)495-231
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Россия (495)268-04-70

Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Липецк (4742)52-20-81
Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Киргизия (996)312-96-26-47

Новокузнецк (3843)20-46-81
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Казахстан (7172)727-132

Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Тверь (4822)63-31-35
Томск (3822)98-41-53
Тула (4872)74-02-29
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Ярославль (4852)69-52-93

PRODUCT INFORMATION

ProGrip The quick nut

Product description


It's hard to imagine wheel balancing technology today without the Pro-Grip quick nut.

With the ProGrip an optimized application on the wheel is achieved.



Product features

- Made from light polyamide (PA)
- Functional design
- In different thread diameters available
- Also with handles available (optionally)

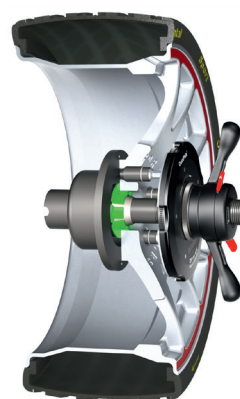

Application of the ProGrip on the wheel
(in combination with QuickPlate and DuoExpert)

Product overview

Description	Part no.
ProGrip Tr 40 x 3	143 403 003
ProGrip Tr 40 x 3 incl. handles	143 403 006
ProGrip Set Tr 40 x 3	124 403 000



ProGrip



ProGrip with handles



ProGrip Set

Gebrauch, Reinigung und Ersatzteile - Use, Maintenance Instruction, Repair kit


Anwendungsbeispiele:

Verwenden Sie die **ProGrip** nur an Radauswuchtmaschinen, die den geltenden Sicherheitsrichtlinien entsprechen. Achten Sie auf den richtigen Gebrauch für die verschiedenen Einsatzgebiete! In der Übersicht ist eine Auswahl von Anwendungsmöglichkeiten für die **ProGrip** dargestellt.

1. Standard Druckring mit Schnapphaken für **ProGrip**
Standard Pressure ring with snap-fit for ProGrip
2. Spannhaube klein mit Schnapphaken (für Stahlfelgen)
Clamping hood small with snap-fit (for steel rims)
3. Spannhaube groß mit Schnapphaken (für ALU Felgen)
Clamping hood large with snap-fit (for alloy rims)
4. Typenspannplatte - QuickPlate
Flange plate adaptors - QuickPlate

Example:

Only use the **ProGrip** on balancers that meet the valid security policies. Please pay attention of use in the different fields of application! Below are some of the different applications for the **ProGrip**

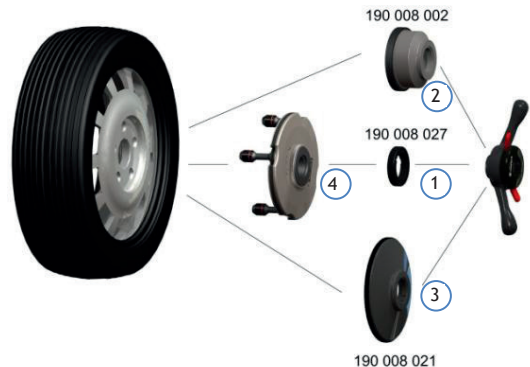


ACHTUNG!

Die Griffe der **ProGrip** dürfen nicht an der Felge aufliegen! Spannungen beschädigen die Schnellspannmutter und können bis zum Bruch führen!

ATTENTION

The handles of the **ProGrip** must not touch the rim as this type of pressure may damage the wing nut which may lead to fractures.

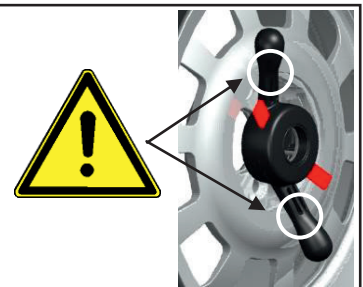

Reinigung der ProGrip

Der Schnappmechanismus einer **ProGrip** ist auf Dauer nur funktionstüchtig, wenn alle Einzelteile regelmäßig gereinigt werden. Bei starker Verschmutzung kann es vorkommen, dass die Mutter anfängt über das Wellengewinde zu „springen“. Um dies zu verhindern, gehen Sie wie folgt vor:

- Entfernen Sie die Einzelteile wie auf nebenstehender Zeichnung beschrieben.
- Reinigen Sie jedes Teil sorgfältig. Wir empfehlen dazu Waschbenzin oder Kaltreiniger für die Metallteile.
- Vergewissern Sie sich, dass alle Teile öl- und fettfrei sind, bevor Sie die **ProGrip** wieder zusammenbauen.
- Wiederholen Sie diese Reinigung in regelmäßigen Abständen.


Care and cleaning the ProGrip

The mechanical synchronizing system must be regularly cleaned to ensure the long life of all components. If the **ProGrip** is full of dirt it may not grip the shaft correctly. The following steps will ensure that the **ProGrip** is in good working order:

- Disassemble the Pro-Grip as per the drawing
- Clean all part carefully. We recommend a solvent based cleaner for the metal parts
- Make sure that all parts are free of grease or oil before you re-assemble the **ProGrip**
- Clean the **ProGrip** at regular intervals



Reparatursatz / Repair kit

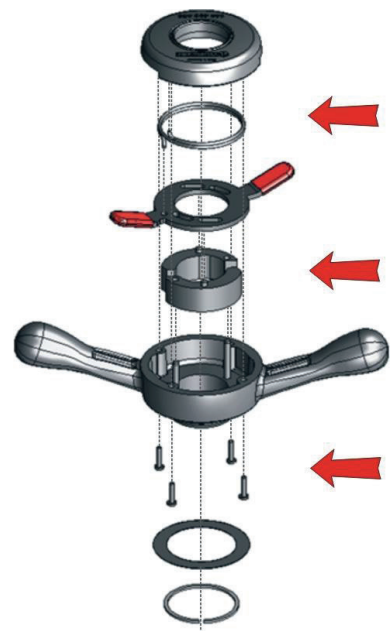

Reparatursatz bestehend aus den gekennzeichneten Teilen.

Repair kit consisting of the above marked parts.

По вопросам продаж и поддержки обращайтесь:

Алматы (7273)495-231
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Россия (495)268-04-70

Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Липецк (4742)52-20-81
Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Киргизия (996)312-96-26-47

Новокузнецк (3843)20-46-81
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Казахстан (7172)727-132

Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Тверь (4822)63-31-35
Томск (3822)98-41-53
Тула (4872)74-02-29
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Ярославль (4852)69-52-93