

Зажимные фланцы WorldKit

Описание

По вопросам продаж и поддержки обращайтесь:

Алматы (7273)495-231
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Россия (495)268-04-70

Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Липецк (4742)52-20-81
Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Киргизия (996)312-96-26-47

Новокузнецк (3843)20-46-81
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Казахстан (7172)727-132

Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Тверь (4822)63-31-35
Томск (3822)98-41-53
Тула (4872)74-02-29
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Ярославль (4852)69-52-93


PRODUCT INFORMATION

WorldKit II

Type Clamping Flanges

Product description

The Type clamping flange WorldKit II is a clamping system that externally enable optimal attachment on the balancing machine. Perfect centering is hereby achieved when combined with an internal centering device (DuoExpert, cylindrical sleeves). This also enables gentle attachment, especially with aluminum rims.

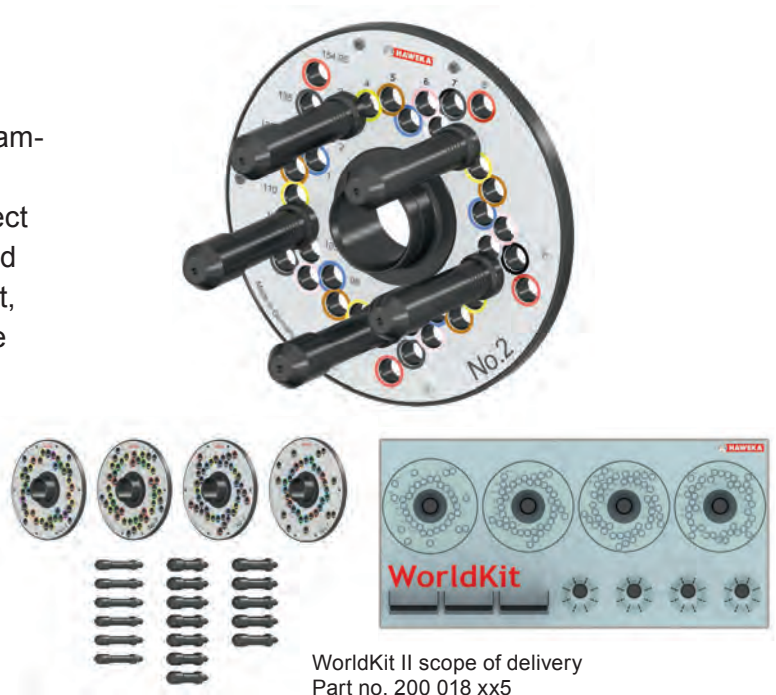

Product range

- **FlangePlate Adaptor TSP No. 1**
colour-coded, PCD: 4x 95,25 / 4x 98 / 4x 100 / 4x 101,6 / 4x 108 / 4x 114,3 / 7x 150 / 4x 170
- **FlangePlate Adaptor TSP No. 2**
colour-coded, PCD: 5x 98 / 5x 105 / 5x 108 / 5x 110 / 5x 115 / 5x 120,65 / 5x 135 / 5x 154,95
- **FlangePlate Adaptor TSP No. 3**
colour-coded, PCD: 5x 100 / 5x 112 / 5x 114,3 / 5x 120 / 5x 127 / 5x 130 / 5x 139,7 / 5x 150 / 5x 165,1
- **FlangePlate Adaptor TSP No. 4**
colour-coded, PCD: 3x 98 / 3x 112 / 3x 114,3 / 3x 115 / 3x 120 / 3x 127 / 3x 130 / 3x 132 / 6x 139,7 / 4x 165,1



PRODUCT INFORMATION

Product overview

Description	Part no.
WorldKit II (incl. 4 FlangePlate No. 1 - 4, Centering studs No. 1 - 3, 1 wall board, wall chart, CD Rom)	200 018 xx5
FlangePlate TSP No. 1	241e801 xx9
FlangePlate TSP No. 2	251e801 xx9
FlangePlate TSP No. 3	251e901 xx9
FlangePlate TSP No. 4	231e111 xx9
Centering stud 1, 100 mm lang	271 994 117
Centering stud 2, 80 mm lang	271 804 118
Centering stud 3, 90 mm lang	271 904 119
Centering stud 4, 80 mm lang (optional)	271 804 121
Centering stud 5, 100 mm lang (optional)	271 994 121
Wall board WorldKit II (optional)	900 008 231



Centering stud 1



Centering stud 2



Centering stud 3

xx = Enter diameter of the balancer shaft as 7th and 8th number (28 / 36 / 38 / 40)

Optional accessories


Centering stud 4
80 mm long, for Rangerover und Landrover
Part No. 271 804 121



Centering stud 5
100 mm long
Part No. 271 994 121



Wall board for WorldKit II
Part No. 900 008 154
(is already included in item 200 018 xx5)

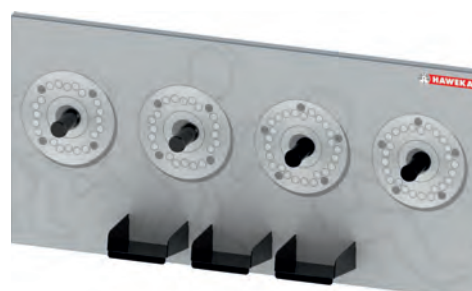

По вопросам продаж и поддержки обращайтесь:

Алматы (7273)495-231
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Россия (495)268-04-70

Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Липецк (4742)52-20-81
Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Киргизия (996)312-96-26-47

Новокузнецк (3843)20-46-81
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Казахстан (7172)727-132

Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Тверь (4822)63-31-35
Томск (3822)98-41-53
Тула (4872)74-02-29
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Ярославль (4852)69-52-93